
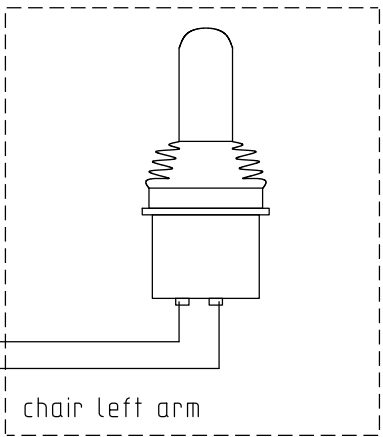


Nav. console

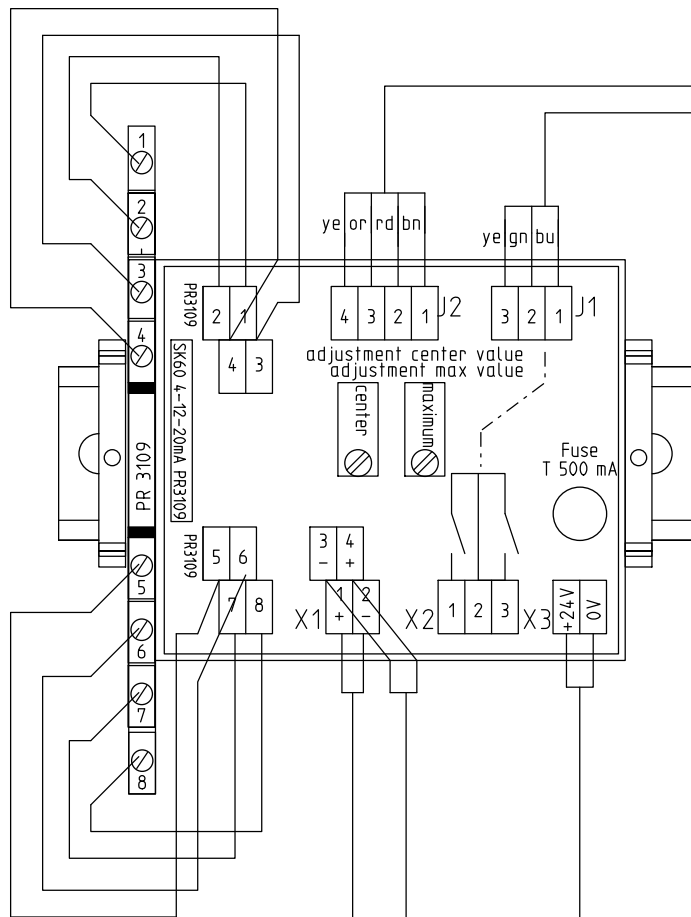

INSTRUCTION FOR USE:
first adjust max value
then adjust center value

bowthruster chamber

4 - 12 - 20 mA
to bowthruster 2

4 - 12 - 20 mA
to bowthruster 1

